



Designed and made in
Canada by Grin
Technologies Ltd.




Grin Technologies
205-950 Powell Street
Vancouver, BC V6A 1H9

info@ebikes.ca
www.ebikes.ca



TorqArmV2

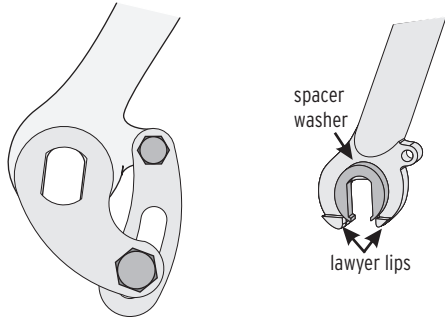

Installation


Tighten the 1/4" bolt between the axle plate and the arm as snug as possible.

The tolerances on motor axles can vary from the nominal 10mm. The plate may slide on freely with a bit of play, it may go on perfectly snug, or in some cases a small amount of filing may be necessary for the plate to slide on.

Many dropouts have quick release "lawyer lips" that come out sideways and prevent the torque plate from sitting flat against the dropout. Use the included "spacer 'C' washer" under the torque plate for a snug fit.

For more information, visit www.ebikes.ca

TorqArmV2

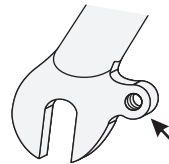

For use on front forks with threaded fender eyelets

